

MOZA Air 2 seznam kompatibilních kamer													
Brand	Model	Select	Cable	Uzávěrka	Nahrávání	ISO	TV	AV	Auto Focus	Ostření (interní)	Napájení kamery		
CANON	EOS R	M3C-USB	M3C-Micro+Micro to Type-C Adapter (optional)	✓	✓	✓	✓	✓	✓	✓	—		
	EOS RP			✓	✓	✓	✓	✓	✓	✓	—		
	EOS 6D Mark II		M3C-Mini	✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 6D			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 60D			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 77D			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 80D			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 5D2			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 5D3			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 800D			✓	✓	—	✓	✓	✓	✓	✓	—	
	EOS 5D Mark IV			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS 200D II			✓	✓	✓	✓	✓	✓	✓	✓	—	
	EOS M50	✓	✓	✓	✓	✓	✓	✓	✓	—			
EOS M5	MCSC-C1	C1 Shutter Cable (optional)	✓	—	—	—	—	—	—	—			
EOS 750D			✓	—	—	—	—	—	—	—			
SONY	Alpha 7S	M3C-USB	M3C-Micro	—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7R			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 6300			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 6400			—	✓	✓	✓	✓	✓	✓	✓		
	Alpha 6500			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7S II			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7R II			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7 II			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7 III			—	✓	✓	✓	✓	✓	✓	✓		
	Alpha 7R III			—	✓	✓	✓	✓	✓	✓	✓		
	DSC-RX100M3			—	✓	✓	✓	✓	✓	—	✓		
	DSC-RX100M4			—	✓	✓	✓	✓	✓	—	✓		
	DSC-RX100M5			—	✓	✓	✓	✓	✓	—	✓		
	Alpha 7S			MCSC-Multi	MCSC-Multi	✓	✓	—	—	—	✓	—	✓
	Alpha 7R	✓	✓			—	—	—	✓	—	✓		
	Alpha 6300	MCSC-Multi/C	MCSC-Multi/C	✓	✓	—	—	—	✓	—	✓		
	Alpha 6400			✓	✓	—	—	—	✓	—	✓		
	Alpha 6500			✓	✓	—	—	—	✓	—	✓		
	Alpha 7S II			✓	✓	—	—	—	✓	—	✓		
	Alpha 7R II			✓	✓	—	—	—	✓	—	✓		
	Alpha 7 II			✓	✓	—	—	—	✓	—	✓		
	Alpha 7 III			✓	✓	—	—	—	✓	—	✓		
Alpha 7R III	✓			✓	—	—	—	✓	—	✓			
DSC-RX100M3	✓			✓	—	—	—	✓	—	✓			
DSC-RX100M4	✓			✓	—	—	—	✓	—	✓			
DSC-RX100M5	✓			✓	—	—	—	✓	—	✓			
Panasonic	DMC-G7KGK			MCSC-Remote	MCSC-Remote	✓	✓	—	—	—	✓	—	—
	DMC-G85GK					✓	✓	—	—	—	✓	—	—
	DMC-GH3					✓	✓	—	—	—	✓	—	—
	Lumix GH4	✓	✓			—	—	—	✓	—	—		
	DC-S1GK-K	M3C-USB	M3C-Micro+Micro to Type-C Adapter (optional)	✓	✓	✓	✓	✓	✓	✓	—		
	Lumix GH5			✓	✓	✓	✓	✓	✓	✓	—		
DC-GH5SGK-K				✓	✓	✓	✓	✓	✓	—			
Nikon	Z6	M3C-USB	M3C-Micro+Micro to Type-C Adapter (optional)	✓	✓	✓	✓	✓	✓	✓	—		
	Z7			✓	✓	✓	✓	✓	✓	✓	—		
	D850		M3C-Micro	✓	✓	✓	✓	✓	✓	—			
FUJIFILM	X-T2	MCSC-C1	C1 Shutter Cable (optional)	✓	✓	—	—	—	✓	—	—		
	X-T3			✓	✓	—	—	—	✓	—	—		
	X-T20			✓	✓	—	—	—	✓	—	—		
	X-T30			✓	✓	—	—	—	✓	—	—		