

EASY TELEPROMPTER

(FC-TP-EZ)

INSTRUCTION MANUAL



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

INTRODUCTION

FILMCITY has created a teleprompter for all applications. Whether you're doing ENG work and need a prompter that works quickly with a tablet, or your are working in a studio or a speech setting where screen size and clarity are high priorities, there is an easy teleprompter for your application. It is a highly flexible on-the-go prompting solution for corporate meetings, instructional videos, seminars or advertisements. This unique LCD mounting system allows the display to be placed at floor level for the least noticeable appearance. The display can also be raised halfway up the stand and hidden with the included skirting.

IN THE BOX

Please inspect the contents of your shipped package to ensure you have received all that is pictured and listed below.



NOTE: The teleprompter glass has a different amount of reflectivity at both ends. If the glass is not installed in proper orientation than you may experience a "double image" or "text shadow" effect on the teleprompter. To eliminate this, we have applied a Red sticker on the front side of the glass. Incase, the mark gets removed and you face this issue, simply flip the teleprompter glass.

ASSEMBLING YOUR TELEPROMPTER

• Attach the rod support with quick release of your tripod and tighten to secure it.





• Mount it on Fluid head and tighten the knob.





• Attach the Teleprompter with 300mm long rods and tighten the knob to secure it.





• Remove the knob from rod holder to, attach the camera mount plate and then tighten the knob.





• Attach the camera on camera mounting plate and tighten the knob to secure it.





• Attach the protective sunhood on teleprompter glass and mount your ipad on the holder bracket plate.





• Tighten the bracket to secure the ipad well.



Note :You can also use your mobile phone.



FILMCITY EASY TELEPROMPTER ALL DRESSED UP AND GOOD TO GO



WARRANTY

We offer a one year warranty for our products from the date of purchase.

We will repair or replace your product, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the user manual. Please note that we will not cover any shipping costs for returning the product to us. If any VAT or import duties are applied to the return, we will also charge these costs to the customer.

The warranty does not include, by the way of example, damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

We are not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty.

Replacement parts of the product will be provided at nominal cost (covering the cost price of the replacement parts only) to the customers after the Warranty Period has expired. We will cover the complete cost of sending replacement parts within the warranty period. After that, nominal cost of the product & Actual shipping cost will be charged.

Do not send the unit to us without first getting a response and getting the approval to send back the item.

In case of any kind of dissatisfaction, we urge you to Contact us immediately and we shall do our best to help you out.

For any other assistance you can reach us via email.